MAINTENANCE

OILING YOUR MACHINE

For an easy running machine, proper oiling is of the utmost importance. When in continuous use the machine should be oiled every day; for moderate use, an occasional oiling is satisfactory.

To reach the parts inside the arm, raise each of the 2 arm covers, see Fig. 44. Remove set screw (A) and lift off small end of arm cover. Apply oil to the oil holes indicated by the arrows. Now turn the hand wheel and apply 2 drops of oil to all moving parts exposed.

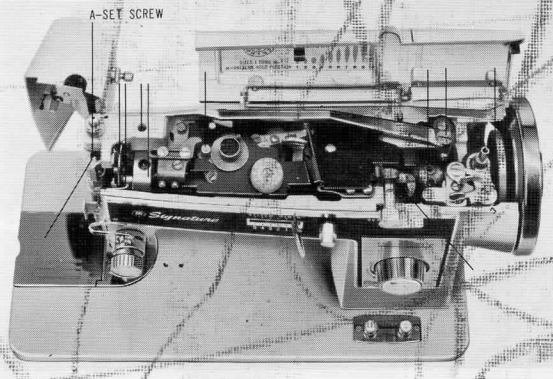

Fig. 44

To oil parts under bed of machine, tip the head back on its hinges and oil all moving parts. See Fig. 45.

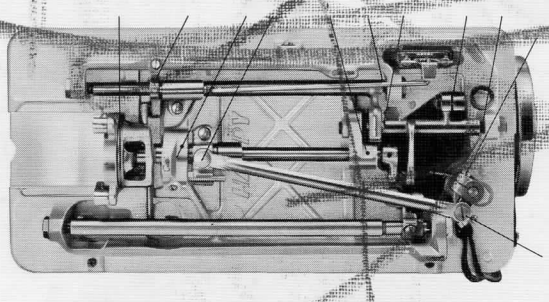

Fig.45

OILING THE SHUTTLE RACE

The shuttle race is one of the most important oiling spots on your machine. Put a drop of oil in spot indicated by arrow in Fig. 52. This should be done before you begin sewing each time you use your machine.

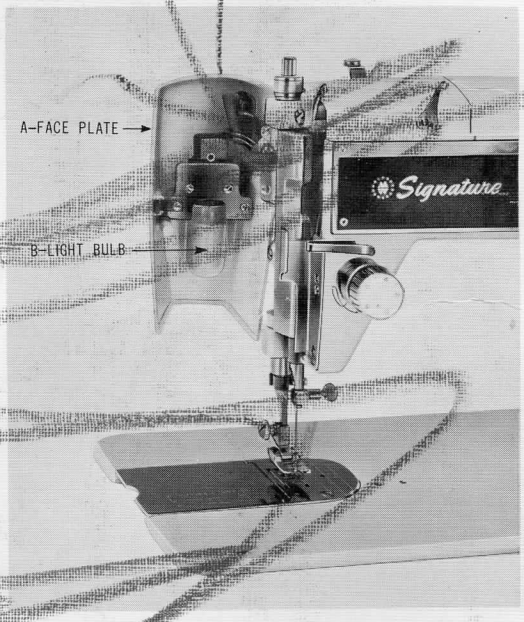

Fig. 46

REPLACING THE SEWING LIGHT BULB

The sewing light is mounted inside the hinged face plate. To replace the bulb, open the face plate (A) Fig. 46. This will expose the bulb (B) for easy removal and replacement in its screw base socket.